


Cleaning Instructions

⚠ CAUTION Please wear rubber gloves and wash water cooler to prevent scald.

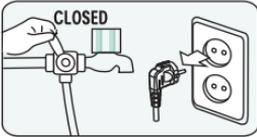

1. First of all, lock the water source valve and unplug the main power of Water Cooler.




2. Drain hot water through the hot water faucet until water temperature becomes room temperature.



3. Separate top cover and cold water tank cover assembly from cold water tank and clean it.




4. Drain cold water through cold water faucet.

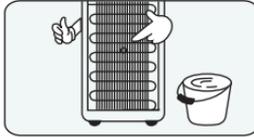


5. Drain the water of hot water tank by opening hot water drain cap counter-clockwise located in the back of the cooler and then lock drain cap clockwise.




6. Pull out and clean cold water baffle from cold water tank.

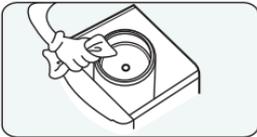


7. Clean the interior of cold water tank. (When doing this, be careful so that no water can go inside hot water tank. Fire may occur.)

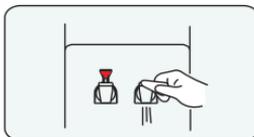

8. Drain the water of cold water tank and rinse it with purified water. (When doing this, drain it through cold water faucet.)

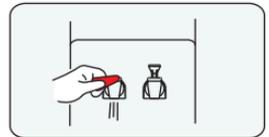


9. Fill cold water tank with purified water and fill hot water tank with purified water by opening hot water faucet.

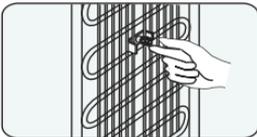

10. Drain the water of hot water tank by opening hot water drain cap located in the back of cooler. And then lock drain cap.



11. Insert cold water baffle into cold water tank.

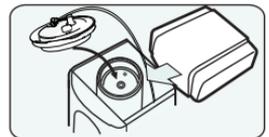

12. Join cold water tank cover assembly and top cover back to the original positions.

13. Cleaning is done. Use cooler after installing it according to Installation Procedures of User's Manual.